



Water leak alarm SZ\1B

Manuall



Thank you for purchasing our products. Please read the instruction manual and maintenance guide before use.

The producer is not responsible for damage resulting from incorrect installation or operation of the device.

Water leak alarm SZ\1B is designed for an early detection of water in the places exposed to water leak, e.g. cellars, garages as well as the rooms with devices like dishwasher, washing machine, air conditioner, etc. The manufacturer cannot be held liable for any damage caused by the incorrect installation or handling of the device.

Технически данни

Supply voltage	9V DC (1 x battery included)
Избор на ток	5-10 μ A
Response time	≤ 7 seconds
Alarm volume	85dB / 3m
Размер	$\varnothing 85$ mm x 30 mm
Range of working temperatures	-1°C ÷ +50°C

IN THE KIT

9V DC battery 1x 

Mounting screws 2x 

INSTALLATION



1. Open the battery cover using a coin or a screwdriver.
2. Insert one 9 V battery. Remember to keep the correct polarity.
3. Close the device with a cover. Check if the seal is positioned properly.
4. The device is now ready. Just place it on the floor or other location potentially exposed to water leak. When water is detected, the detector will trigger the sound alarm. Do not place the detector on metal or conductive surfaces; this may trigger a false alarm.

BATTERY REMOVAL

Low battery is indicated by a single sound at approx. 30 seconds. The battery should be replaced as described in „Installation“ chapter. To ensure high efficiency of the device the battery should be replaced once per year.

USE

- 1.** Dust and dirt should be regularly removed from the device using a soft cloth.
- 2.** The battery should be replaced at least once per year.
- 3.** If the device gets soaked with water it should be removed from water as soon as possible. Remove the battery and leave the device until it gets dry before using it again.
- 4.** Do not repair the device on your own, or remove the manufacturer's seal; this will void the warranty.